

## RoadLazer™ 55-Gallon Agitator Kit

308795D  
EN

100 psi (7 bar, 0.7 MPa) Maximum Working Pressure

### Model 239935, Series A



**Important Safety Instructions**  
Read all warnings and instructions in this manual. Save these instructions.

### Pressure Relief Procedure



Follow the Pressure Relief Procedure whenever you see this symbol.



This equipment stays pressurized until pressure is manually relieved. To help prevent serious injury from pressurized fluid, such as skin injection, splashing fluid and moving parts, follow the Pressure Relief Procedure when you stop spraying and before cleaning, checking, or servicing the equipment.

1. Set hydraulic bypass valve to BYPASS position.
2. Stop engine by turning key to OFF position.
3. Place empty pail under paint guns to catch drainage.
4. Relieve hose pressure: use Programmable Skipline Controller to trigger each gun for at least 3 seconds each.
5. Close paint gun ball valves.
6. Place empty pail under drain valves to catch drainage.
7. Open all drain valves one at a time.
8. Close valves immediately to prevent paint from drying in system.
9. Relieve beads system pressure by turning bead system valve to OFF position.
10. If you suspect the spray gun or hose is clogged, or that pressure has not been fully relieved:
  - a. VERY SLOWLY loosen the tip guard retaining nut or the hose end coupling to relieve pressure gradually.
  - b. Loosen the nut or the coupling completely.
  - c. Clear the obstruction in the hose or tip.

## Installation

1. Follow **Pressure Relief Procedure**, page 1.
2. Install agitator on paint drum per manual 308175.

**NOTE:** Use pipe sealant (8) on all threads.


3. Install 1/8 in. air nipple (4) on agitator.
4. Install coupling (7) and coupler (5) on air hose (2).
5. Connect air hose (2) to 1/8 in. air nipple (4).
6. Connect adapter (6) and fitting (3) to air hose. Connect air hose (2) to air line coupler (10).

## Operation

1. Follow **Pressure Relief Procedure**, page 1.
2. Turn on RoadLazer per manual 308611.
3. Turn on Agitator per manual 308175.

## Cleaning

1. Follow **Pressure Relief Procedure**, page 1.
2. Clean Agitator per manual 308175.

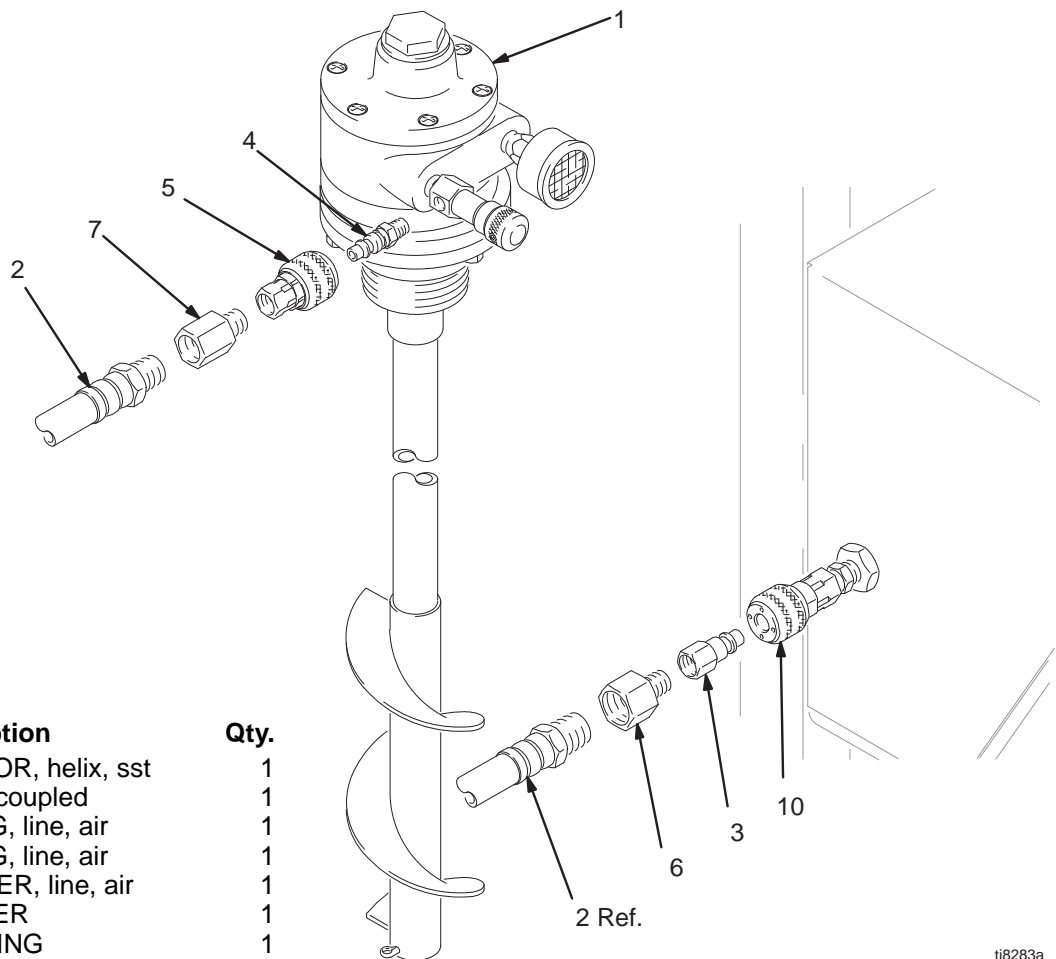

## Parts

Ref No.	Part No.	Description	Qty.
1	235534	AGITATOR, helix, sst	1
2	109132	HOSE, coupled	1
3	169967	FITTING, line, air	1
4	169969	FITTING, line, air	1
5	208536	COUPLER, line, air	1
6	159842	ADAPTER	1
7	150287	COUPLING	1
8	119400	SEALANT, pipe, sst	2

All written and visual data contained in this document reflects the latest product information available at the time of publication. Graco reserves the right to make changes at any time without notice.

Original instructions. This manual contains English. MM 308795

**Graco Headquarters:** Minneapolis

**International Offices:** Belgium, China, Japan, Korea

**GRACO INC. AND SUBSIDIARIES • P.O. BOX 1441 • MINNEAPOLIS MN 55440-1441 • USA**  
**Copyright 1998, Graco Inc. All Graco manufacturing locations are registered to ISO 9001.**

www.graco.com

Revision D, August 2015

ti8283a