

235636 Repair Kit

For Model 239145 Severe-Duty Displacement Pump

406137F


EN



Important Safety Instructions

Read all warnings and instructions in manual 307619. Save those instructions.

Ref.	Description	Qty.
3	PIN, cotter, SST, 0.12 in. (3.2 mm) x 1.5 in. (38 mm)	1
109	O-RING, PTFE	1
110	BALL, 440C SST, 0.31 in (7.9 mm) dia	1
112	BALL, 440C SST, 0.5 in (13 mm) dia	1
114	V-PACKING, throat, leather	2
115	V-PACKING, piston, leather	2
116	GLAND, throat, female SST	1
117	GLAND, piston, male, SST	1
118	GLAND, throat, male, SST	1
120	GASKET, PTFE	1
121	GLAND, piston, female, SST	1
122	RETAINER, packing, SST	1
123	V-PACKING, throat, PTFE	2
124	V-PACKING, piston, PTFE	2

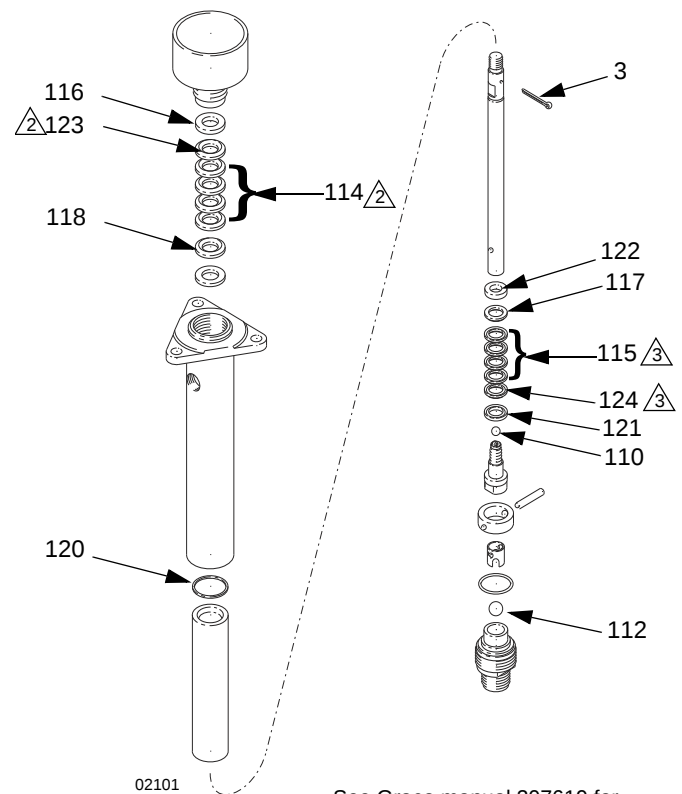

- ① See Graco manual 307619 for assembly instructions.
- ② Lips of v-packings 114 and 123 must face down.
- ③ Lips of v-packings 115 and 124 must face up.

Graco Inc. P.O. Box 1441 Minneapolis, MN 55440-1441

406137 Rev, F 09/2015

Copyright 1992, Graco Inc. is registered to I.S. EN ISO 9001