GENUINE GRACO PARTS & ACCESSORIES

FLUID SECTION REPAIR KIT

For Plastic Husky™ 307 Pumps

INFORMATION ENCLOSED

GRACO INC. / P.O. BOX 1441 / MINNEAPOLIS, MN 55440–1441
406269 Rev B - / */ - . . PRINTED IN U.S.A.

⚠ WARNING

For detailed instructions and warnings, see manual 308553.

NOTE: Reference numbers refer to the parts list in manual 308553.

1. Apply 111920 Lubricant (included) to shaft.
2. Apply 111920 Lubricant (included) to threads.
3. Flat side faces ball.
4. Beveled end up.
6. Round side must face toward diaphragm.
7. Apply medium-strength (blue) Loctite® or equivalent. Torque to 35–55 in–lb (3.9–6.2 N.m) at 100 rpm maximum..
8. Torque to 50–60 in–lb (5.6–6.8 N.m).
9. Do not over-torque.
10. Notches must engage tabs.

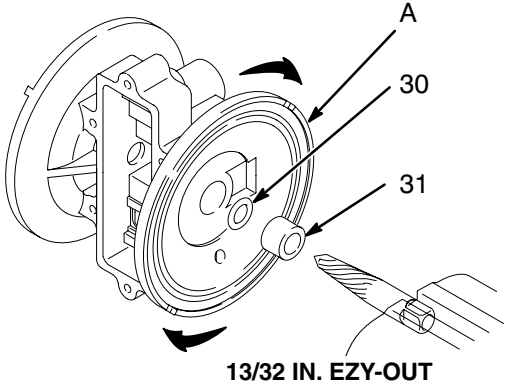

13/32 IN. EZY-OUT

01442

DETAIL OF BEARING REMOVAL USING EZY-OUT

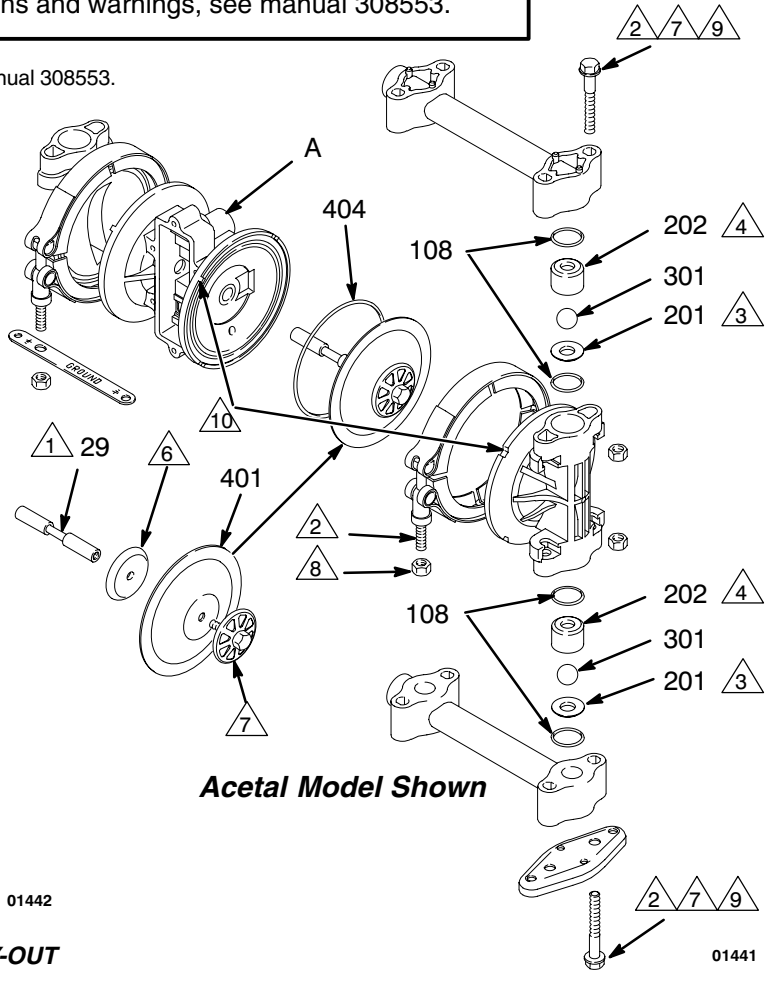

Acetal Model Shown

01441